


# DS DISPENSER MANUAL TO NO TOUCH CONVERSION

Three simple steps to converting the *Manual Dispenser* to a *No Touch Dispenser*



## STEP 1 REMOVE MANUAL FRONT COVER

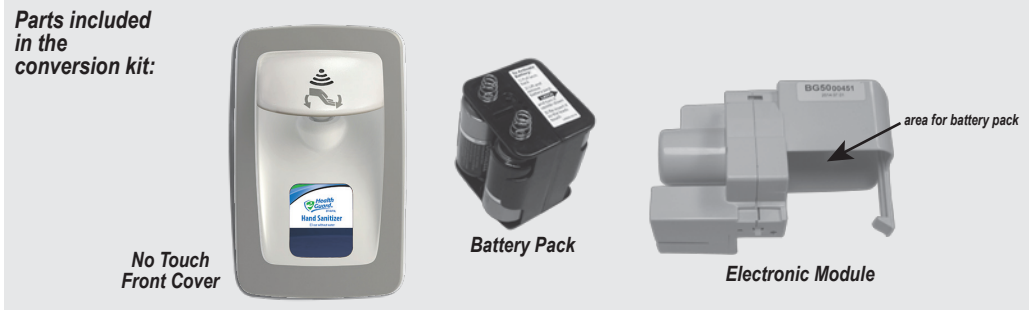

Open dispenser and remove refill bag.  
A. With thumb or finger, pop one cover leg off cover pin.




B. Remove other cover leg.

### CONVERSION KIT FRONT COVER COLORS:

- **BLACK** 99BK31F
- **GRAY** 99GR32F
- **WHITE/GRAY** 99WH32F
- **ALL WHITE** 99WH33F
- **BLACK SLIM** 99BK31H
- **GRAY SLIM** 99GR32H
- **WHITE/GRAY SLIM** 99WH32H
- **ALL WHITE SLIM** 99WH33H

## STEP 2 INSERT ELECTRONIC MODULE & BATTERY PACK

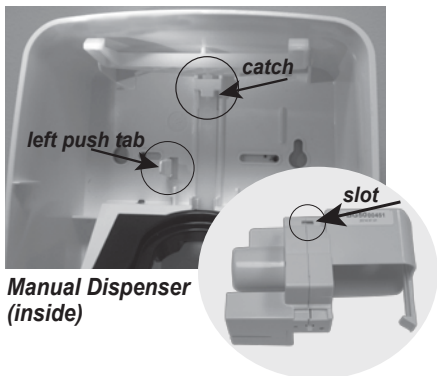

A. Align slot in Electronic Module with catch on back wall of dispenser housing and snap down into place behind left push tab.



B. Insert Battery Pack into Electronic Module with contacts touching (this will activate the unit).

## STEP 3 INSTALL NO TOUCH FRONT COVER



A. Insert one leg over pin, then slightly bend and insert other leg.



B. Re-insert refill bag (bottom first).



C. Close cover and snap into place with both thumbs.